



RESILIENT SUPPRESSORS

RS9 SAFETY MANUAL

Warning

Before cleaning, installing or uninstalling your RS9, verify that magazine is out of the firearm and that the firearm is unloaded. Failure to do so, may result in serious injury or death. The RS9 will become hot while in use, when installing or uninstalling the RS9 use the proper protective gear. Place the RS9 in an area where it will not come in contact with flammable material. Verify bore alignment prior to use. The RS9 has caliber and barrel length restrictions, failure to follow these restrictions will void your warranty and may lead to serious injury or death. The RS9 must be removed from the firearm for cleaning. Ensure that you have assembled the RS9 properly prior to use.

Cleaning

Ensure that your firearm is unloaded and that your RS9 is not hot prior to removal. You may then remove the end cap and baffles. For cleaning we suggest you place the baffles in an ultrasonic cleaner with dish soap. The baffles of the RS9 are the only components that should ever enter an ultrasonic cleaner. For the main body section, we suggest warm soapy water that is not very harsh and a small brush.

Baffle Stack Assembly

The RS9 features an indexable baffle design. The indexing tabs should be fully seated while constructing the stack. Starting with a flat surface, place the smallest three baffles on top of each other aligning the indexing tabs. You will then stack the three medium baffles on top of the previous three aligning the indexing tabs. You will then place the largest baffle on your stack, followed by the two flange style baffles. With your stack now complete and all of your indexing tabs aligned and seated, you will then slide the main body section of your RS9 over the baffles stack you have just assembled. Then while holding the baffle stack in place you will then flip over the tube and install your endcap.

